







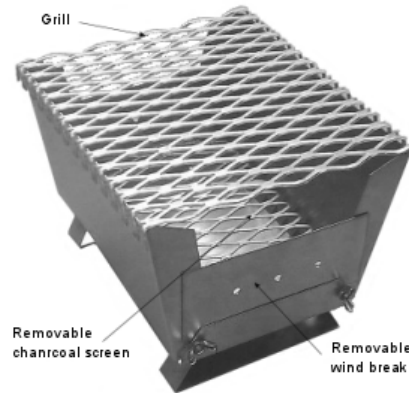

Dual Fuel Mini Portable BBQ / Stove

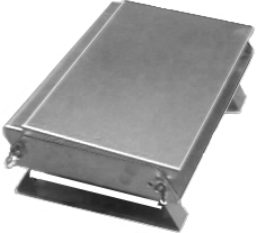

Operating Instructions on page 2

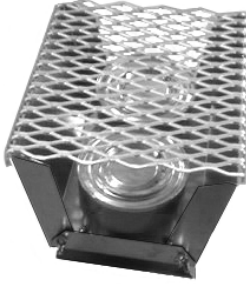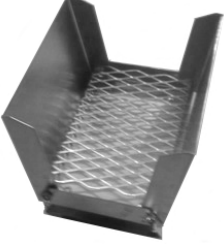		
<p>Figure 1. Locate unit in accordance with Safety and Usage Warnings.</p>	<p>Figure 2. Open the two side panels.</p>	
		
<p>Figure 3. For Gel Fuel operation, place fuel cans directly on base.</p>	<p>Figure 4. Install cooking grill.</p>	
		
<p>Figure 5. For charcoal operation, place charcoal screen on base.</p>	<p>Figure 6. Optionally install side wind breaks by inserting them between the base and sides.</p>	<p>Figure 7. Place charcoals on charcoal screen and install grill.</p>

OPERATION:

IMPORTANT: Unit sides and base will become very hot whether using charcoal barbecue or gelled fuel. Always locate and operate this unit as described in the “**DANGER AND SAFETY WARNINGS**” and “**SAFETY AND USAGE WARNINGS**” sections of the accompanying safety instruction sheet.

Setup:

Check grill, screen, and sides and remove excess grease build up before each use.

Open the side panels as shown in Figure 2 and tighten finger-tight (do not over-tighten).

For Gelled Fuel Operation:

Place alcohol based gel fuel cans directly on the stove base (Fig. 3).

Tip: Most Gelled Alcohol based Chafing/Fondue fuels can be used, such as Sterno®, Canned Heat™, Power Heat+®, etc. These types of fuels can be found in many grocery, sporting goods, and food services stores and can be found in various sizes. Two 7 oz. (2 hr) fuel cans or four 2.6 oz (45 min.) fuel cans can be used.

WARNING: Always read and follow the fuel manufacturer’s instructions for lighting, extinguishing and safely using gelled fuels.

Light gelled fuel cans and place grill on sides (Fig. 4). You may begin cooking immediately.

When complete, extinguish gelled fuel in accordance with the manufacturer’s instructions. Let the unit and fuel cans cool completely. Do not store unit or until all ash and coals are fully extinguished.

For Charcoal Barbecue Operation:

Place charcoal screen on base (Fig. 5). Optionally insert wind breaks on each side between base and sides (Fig. 6).

Stack charcoal into a pyramid-shaped pile. If using charcoal starting fluid, follow the manufacturer’s instructions. Remove any excess fluid that may have accumulated before lighting and do not add lighter fluid to hot coals or a burning flame.

When coals are covered with a light grey ash (typically 15-30 minutes), use proper barbecue tools with long, heat-resistant handles to optionally arrange the coals evenly on the coal screen.

Extinguish coals when finished cooking or let coals burn out completely. Never dump ashes or coals before they are fully extinguished. Do not store product until all ash and coals are fully extinguished.

Cleaning:

- Use a warm soapy water solution to clean and rinse with water. Do **not** use oven cleaner. For stainless steel units, do not use cleaners that contain citrus products, or abrasive cleaning pads. Clean and dry unit thoroughly before storing. When not in use, store in a dry location.

YOU MUST READ THIS OWNER'S GUIDE BEFORE USING THIS PRODUCT

FAILURE TO HEED THESE STATEMENTS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH, OR A FIRE OR EXPLOSION RESULTING IN PROPERTY DAMAGE. These instructions must remain with the product. Anyone using this product must be aware of the safety instructions and warnings contained within.

DANGER AND SAFETY WARNINGS:

This product is designed for OUTDOOR USE ONLY. NEVER USE INDOORS, including in a garage, carport, building, or any other enclosed or partially enclosed area. If used indoors or in an area that is not well-ventilated, toxic fumes will accumulate and cause SERIOUS INJURY AND/OR DEATH.

Only use this product on a secure, level, non-combustible, well-ventilated and outdoor location.

This product must only be used for outdoor grilling. It is not intended for any other purpose. This product is not intended to be used on any moveable recreation vehicle or boat. It should NEVER be used as a heater.

Do not operate this product within five feet of any combustible material, including but not limited to grass, brush, wood, decks, patios, porches, tables, or other structure.

The use of alcohol and/or medication (including but not limited to prescription or non-prescription drugs) may impair a user's ability to properly and safely operate this product.

This product will become very hot while in use. Do not move it and keep children and pets away when in use.

Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

SAFETY AND USAGE WARNINGS:

Do not use gasoline, spirit, petrol or other highly combustible fluids for lighting charcoal.

Only use charcoal starter fluid on non-impregnated charcoal.

If using charcoal starter fluid, remove any fluid that may have accumulated in the ashtray before lighting the charcoal. Always cap starter fluid and keep at a safe distance when lighting or when grill is in use.

Do not add charcoal fluid or charcoal impregnated with charcoal starter fluid to hot or warm coals.

Do not use product unless all pieces are properly in place, including but not limited to, trays, screens, and legs.

Do not wear loose clothing while operating this product or use product in high winds.

Keep the cooking area clear of flammable vapor, liquids and other combustible materials.

Do not handle or remove ashes until charcoal is completely burned out and fuel fully extinguished.

To minimize rust and corrosion and extend unit life, clean and dry unit when finished. Do not leave unit exposed to the elements for extended periods. When not in use, store in a dry location.