



Appagare, Inc.

Mini Portable BBQ

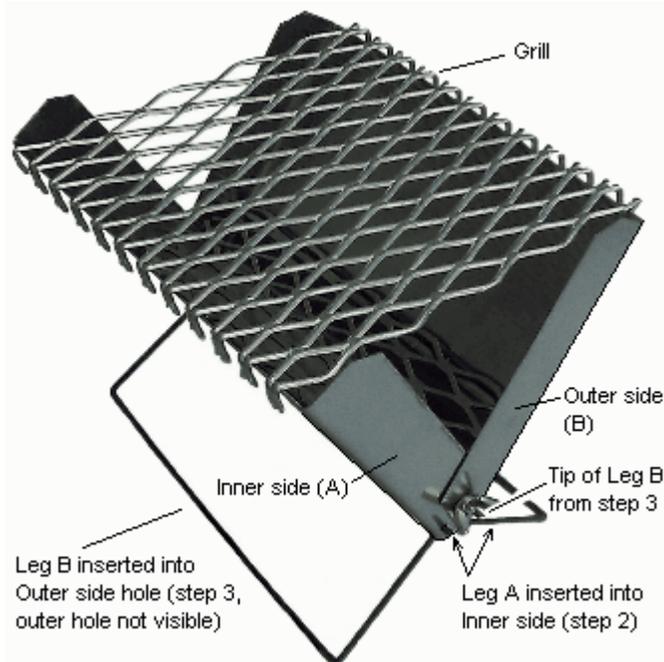


Figure 1
(see pg 2 for assembly)

OPERATION:

- **IMPORTANT:** Always locate and operate this unit as described in the “**DANGER AND SAFETY WARNINGS**” and “**SAFETY AND USAGE WARNINGS**” sections of the accompanying safety instruction sheet.


- Check ashtray and sides for grease build-up before each use and remove any excess grease.

- Stack charcoal into a pyramid-shaped pile. If using charcoal starting fluid, follow the manufacturer’s instructions. Remove any excess fluid that may have accumulated in the ashtray before lighting and do not add lighter fluid to hot coals or a burning flame.


- When coals are covered with a light grey ash (typically 15-30 minutes), use proper barbecue tools with long, heat-resistant handles to arrange the coals evenly on the coal screen.

- Extinguish coals when finished cooking or let coals burn out completely. Never dump ashes or coals before they are fully extinguished. Do not store product until all ash and coals are fully extinguished.

- Use a warm soapy water solution to clean and rinse with water. Do **not** use oven cleaner. For stainless steel units, do not use cleaners that contain citrus products, or abrasive cleaning pads. Clean and dry unit thoroughly before storing. When not in use, store in a dry location.

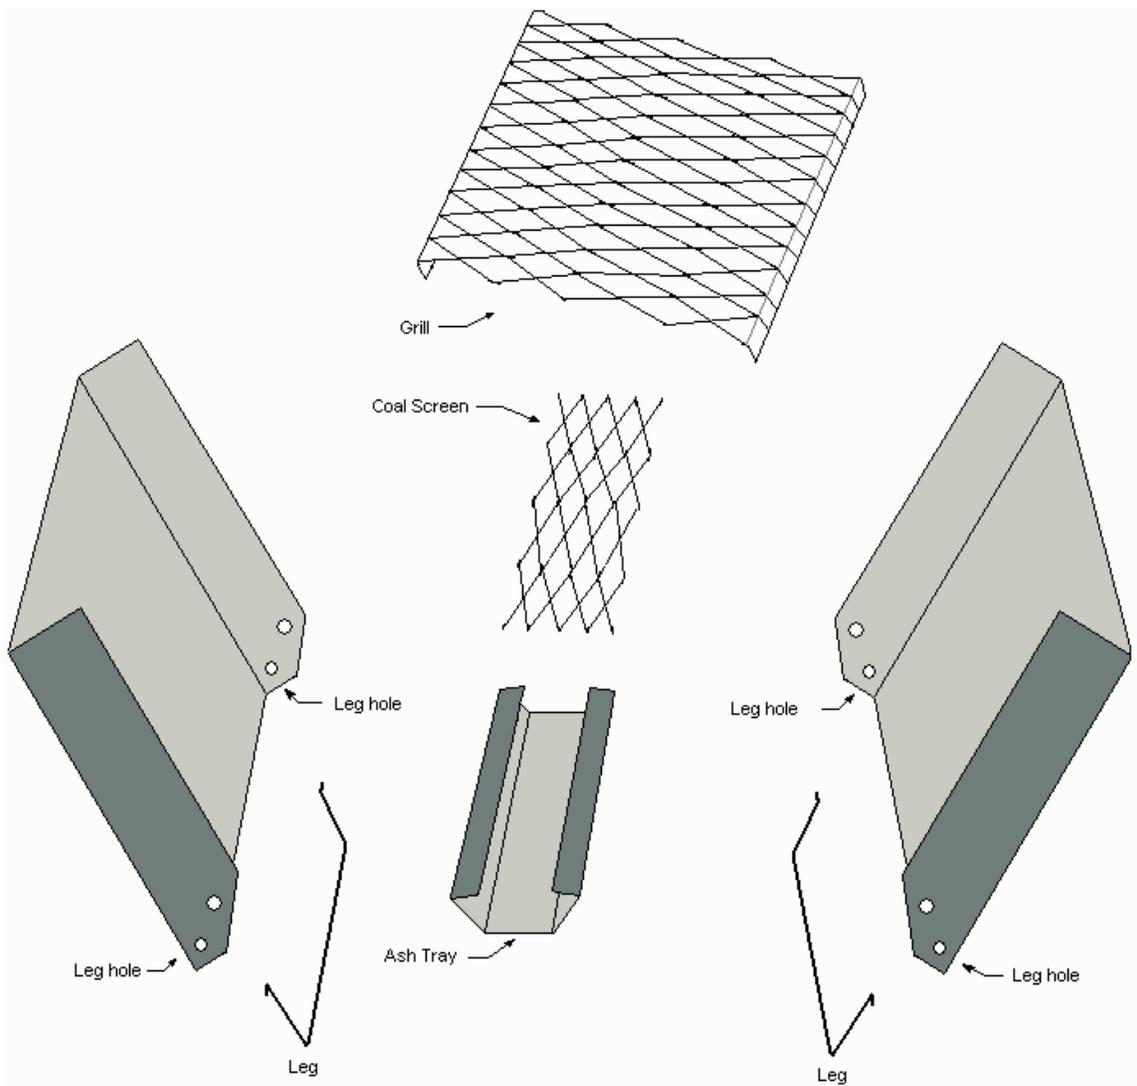

ASSEMBLY:

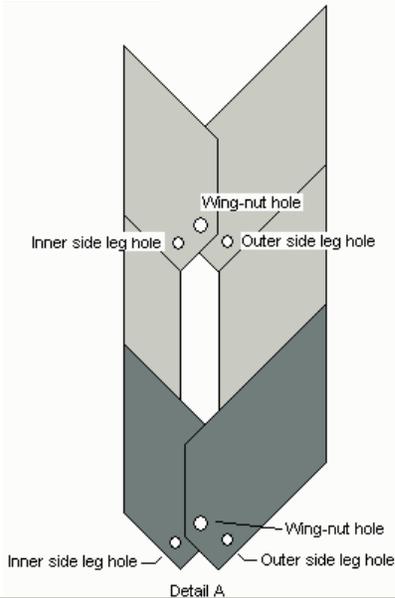

The clamshell-like case is opened/closed by loosening the wing-nuts on each end. Only tighten finger-tight – do not over-tighten

1. Open the unit to approximate 70° and tighten the wing-nuts on each end finger tight.
2. Insert one leg (Leg A) into the leg holes on the **inner**-side piece (see Figure 1 and Detail A).
3. Insert other leg (Leg B) into the leg holes on the **outer**-side piece so the two legs cross in an "X" on the inside of the two side pieces.
4. Place the ash tray into the two side units. Adjust the angle of opening so the ash tray is flush with the sides.
5. Lay the coal screen over the ash tray.
6. Place the grill on the unit.

YOU MUST READ THIS OWNER'S GUIDE BEFORE USING THIS PRODUCT

FAILURE TO HEED THESE STATEMENTS MAY RESULT IN SERIOUS BODILY INJURY OR DEATH, OR A FIRE OR EXPLOSION RESULTING IN PROPERTY DAMAGE. These instructions must remain with the product. Anyone using this product must be aware of the safety instructions and warnings contained within.

DANGER AND SAFETY WARNINGS:

This product is designed for OUTDOOR USE ONLY. NEVER USE INDOORS, including in a garage, carport, building, or any other enclosed or partially enclosed area. If used indoors or in an area that is not well-ventilated, toxic fumes will accumulate and cause SERIOUS INJURY AND/OR DEATH.

Only use this product on a secure, level, non-combustible, well-ventilated and outdoor location.

This product must only be used for outdoor grilling. It is not intended for any other purpose. This product is not intended to be used on any moveable recreation vehicle or boat. It should NEVER be used as a heater.

Do not operate this product within five feet of any combustible material, including but not limited to grass, brush, wood, decks, patios, porches, tables, or other structure.

The use of alcohol and/or medication (including but not limited to prescription or non-prescription drugs) may impair a user's ability to properly and safely operate this product.

This product will become very hot while in use. Do not move it during operation and keep children and pets away.

Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

SAFETY AND USAGE WARNINGS:

Do not use gasoline, spirit, petrol or other highly combustible fluids for lighting charcoal.

Only use charcoal starter fluid on non-impregnated charcoal.

If using charcoal starter fluid, remove any fluid that may have accumulated in the ashtray before lighting the charcoal. Always cap starter fluid and keep at a safe distance when lighting or when grill is in use.

Do not add charcoal fluid or charcoal impregnated with charcoal starter fluid to hot or warm coals.

Do not use product unless all pieces are properly in place, including but not limited to, trays, screens, and legs.

Do not wear loose clothing while operating this product or use product in high winds.

Keep the cooking area clear of flammable vapor, liquids and other combustible materials.

Do not remove ashes until all charcoal is completely burned out and fully extinguished.

To minimize rust and corrosion and extend unit life, clean and dry unit when finished. Do not leave unit exposed to the elements for extended periods. When not in use, store in a dry location.